

Installation Guide


Range: **Showering Solutions** 

Niagra Shower Head Type:

Code: SH024

Version/Date: v1 12/16

# **Legs Fitted Version**

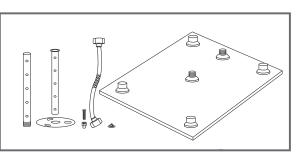


#### Parts List:

- 1 x Square Shower Head
- 2 x Water Hoses
- 4 x Support Legs (Threaded)
- 4 x Support Legs (Top)
- 2 x Gauze Filters
- 4 x Circular Ceiling Mounts
- 4 x Round Headed Nut/Bolt




## Notes:

 Read all instructions before fitting and ensure all parts are included.

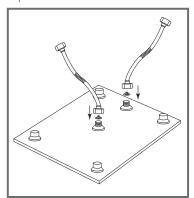


1. Screw the Water Hoses to the Shower Head making sure to insert the Gauze Filters (x2).

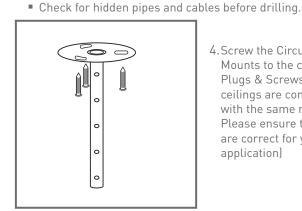


• Flush out all pipework prior to installation.


4. Screw the Circular Ceiling Mounts to the ceiling using Plugs & Screws. (Not all ceilings are constructed with the same materials. Please ensure the fixings are correct for your application)

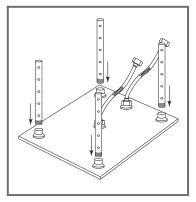

2. Screw the Support Legs (Threaded) to the Shower Head (x4).

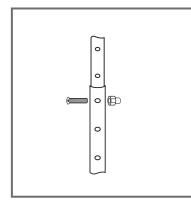

5. Offer the Shower Head up to the ceiling, keeping level. Set to your desired height and join the Support Legs together using the Round Headed Nuts/Bolts (x4).

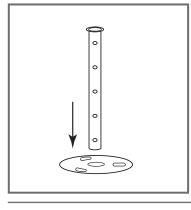

3. Insert the Support Legs (Top) (x4) through the Circular Ceiling Mounts (x4) ensuring that the shiny side faces downwards.

Guarantee/Aftercare: During installation extra care must be taken to avoid damaging the fittings. We provide a guarantee against faulty manufacture or materials (excluding serviceable parts), providing they have been installed, cared for and used in accordance with our instructions.

Phoenix Whirlpools Ltd. Unit 8, Leeds 27 Industrial Estate, Bruntcliffe Ave. Morley, Leeds LS27 0LL

Tel: [Sales] +44 [0]113 2012260 Fax: +44 [0]113 2012268 Email: sales@phoenix-uk.co.uk Web: www.phoenix-uk.co.uk



Installation Guide


Range: Showering Solutions

Type: Niagra Shower Head

Code: SH024

Version/Date: v1 12/16

# Flush to Ceiling Version

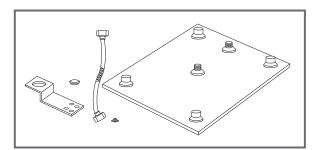


## Parts List:

- 1 x Square Shower Head
- 2 x Water Hoses
- 2 x Gauze Filters
- 4 x Ceiling Brackets
- 4 x Caps




### Notes:


- Read all instructions before fitting and ensure all parts are included.
- Flush out all pipework prior to installation.
- Check for hidden pipes and cables before drilling.

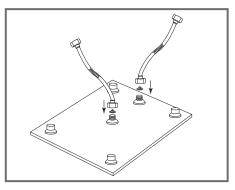


1. Screw the Water
Hoses to the Shower
Head making sure
to insert the Gauze
Filters (x2).

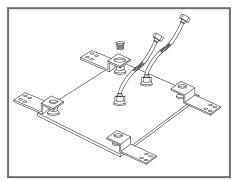

2. Attach the Metal Brackets (x4) to the Shower Head using the threaded Caps (x4).

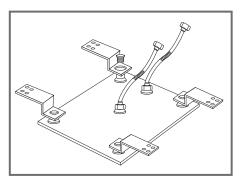

3. Alternatively, attach the Metal Brackets (x4) to the Shower Head upside down to give more height.

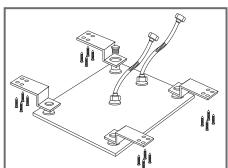

4. The assembled
Head should be
offered to the
ceiling and secured
with suitable
fixings.