
# **INSTALLATION MANUAL**

EN007 EN008

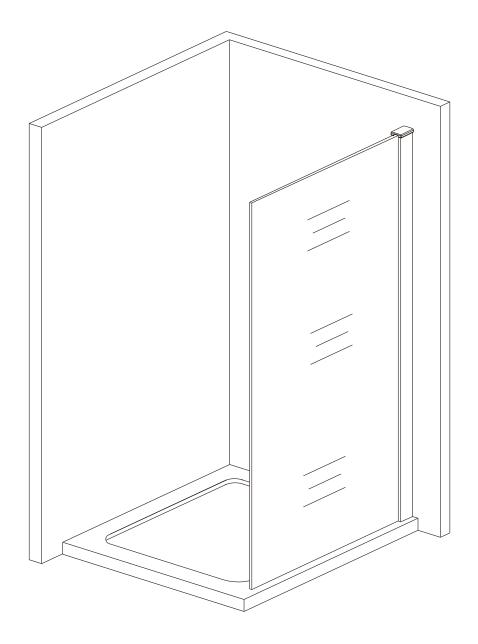

# **TOOLS REQUIRED**

(Pengi)



PENCIL

FLAT AND CROSS HEAD SCREWDRIVERS (Ø6,Ø3.2) DRILL BIT

**SILICONE & GUN** 






**TAPE MEASURE** 

SPIRIT LEVEL


**ELECTRIC DRILL** 


**RUBBER HAMMER** 

### LIST OF SPARE PARTS

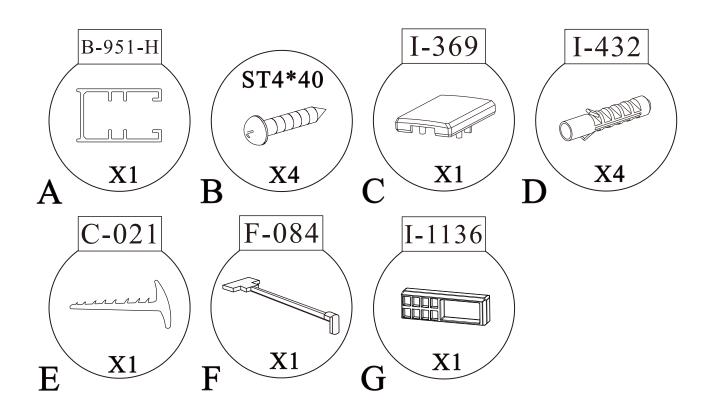

# PRODUCT SCHEMATIC DIAGRAM

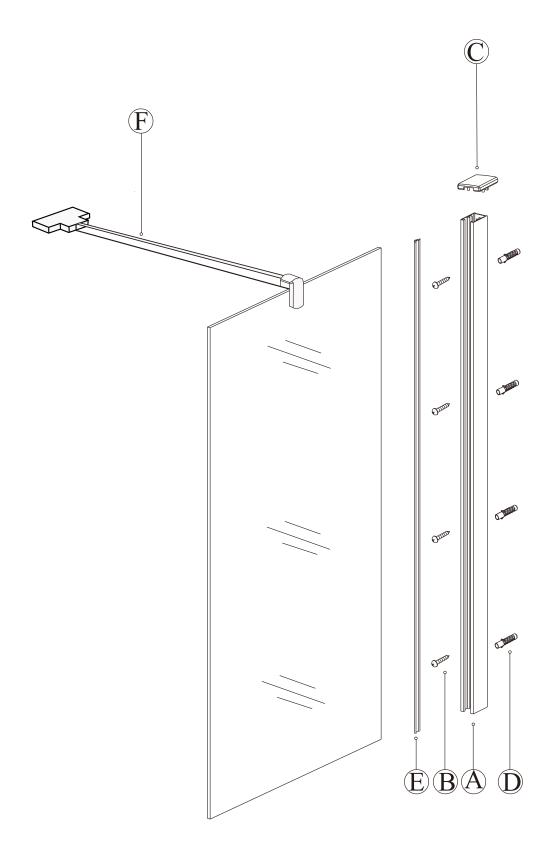


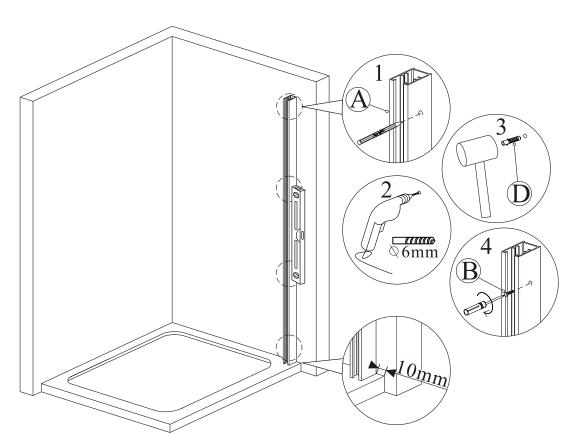


1

2

10mm gap from the edge of wall profile to the outside edge of the tray, which make sure enough room for fitting the water retaining cover

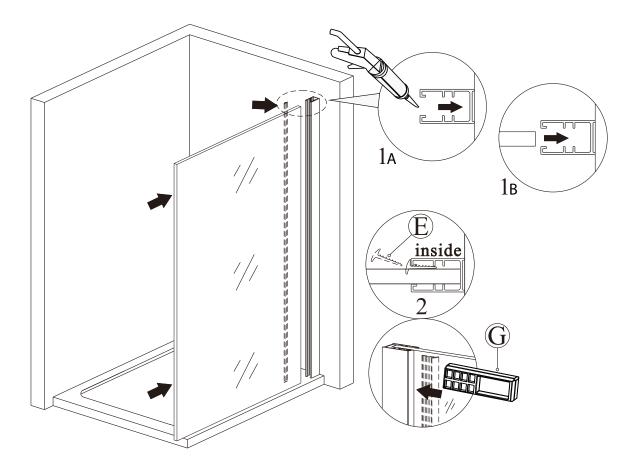

(3)

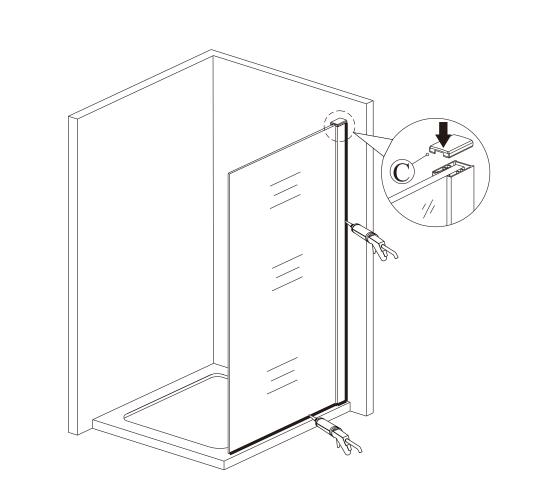

Apply some silicone on the outside edge of the shower enclosure (between the wall profiles and wall and between the frame and the tray) to enhance waterproof. After installation, it needs 24hours for silicone to dry before being put into use.

#### Cleaning & Maintenance

Clean the small components regularly to prevent thedrain frombeing jammed.usually, clean the shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure, you may clean it by woven cloth with toothpaste, but youneed to clean it with water afterwards.

After the installation is completed, if you find there ismuch noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.

S-2636

3